

CERTIFICACIONES

LGAI Technological Center, S.A. (APPLUS)
Campus UAB - Ronda de la Font del Carme s/n
08193 Bellaterra (Barcelona)
T +34 93 567 20 00
www.applus.com



Notified Body No. 0370



No. **0370-4243-PPE/B**

CERTIFICADO DE EXAMEN UE DE TIPO EU-TYPE EXAMINATION CERTIFICATE

ORGANISMO NOTIFICADO Nº <i>NOTIFIED BODY NUMBER</i>	0370 - LGAI TECHNOLOGICAL CENTER (APPLUS)
SOLICITANTE <i>APPLICANT</i>	Ningbo Lvtu Safety Technology Co., Ltd. No.6,Zhong xing Road,Yuyao Economic Development Zone,Zhejiang Province 315403,CHINA
FABRICANTE <i>MANUFACTURER</i>	Ningbo Lvtu Safety Technology Co., Ltd. 3 / F, building 9, 300 Yinhai Road, Jiangbei District, Ningbo City,Zhejiang Province 315403,CHINA
REGLAMENTO DE APLICACIÓN PARA DAR LA CONFORMIDAD / APPLICABLE REGULATION TO GIVE CONFORMITY: REGLAMENTO (UE) 2016/425 SOBRE LOS EQUIPOS DE PROTECCIÓN INDIVIDUAL <i>REGULATION (EU) 2016/425 PERSONAL PROTECTIVE EQUIPMENT</i>	
PROCEDIMIENTO DE EVALUACIÓN DE LA CONFORMIDAD <i>CONFORMITY ASSESSMENT PROCEDURE</i>	Módulo // <i>Module</i> : B EXAMEN UE DE TIPO / EU TYPE EXAMINATION
IDENTIFICACIÓN DEL EPI (NÚMERO DE TIPO) <i>IDENTIFICATION OF THE PPE (TYPE NUMBER)</i>	Ref.: LT2020-AP3 Particle filtering half mask
NIVEL O NIVELES DE RENDIMIENTO O LA CLASE DE PROTECCIÓN DEL EPI / PERFORMANCE LEVEL OR PROTECTION CLASS OF THE PPE	FFP3 NR
NORMAS ARMONIZADAS / HARMONISED STANDARDS	EN 149:2001 + A1:2009 Dispositivos de protección respiratoria. Medias máscaras filtrantes de protección contra partículas. Requisitos, ensayos, marcado. <i>EN 149:2001 + A1:2009 Respiratory protective devices. Filtering half masks to protect against particles. Requirements, testing, marking</i>
FECHA DE EMISIÓN / ISSUE DATE	24/08/2020
VALIDEZ HASTA / VALIDITY UNTIL	24/08/2025
El presente certificado se mantendrá vigente durante 5 años siempre que el producto descrito no sea modificado y cumpla los requisitos esenciales de salud y seguridad establecidos en el Reglamento (UE) 2016/425. Para asegurar dicho cumplimiento, este certificado deberá ir acompañado de la documentación correspondiente a la Evaluación de Conformidad con el tipo según módulo C2, D (realizada por un Organismo Notificado, según frecuencia establecida). <i>This certificate will remain valid for 5 years as long as the indicated product is not modified and fulfills the essential requirements of health and safety established in (EU) Regulation 2016/425. To ensure such compliance, this certificate must be accompanied by the documentation corresponding to the Conformity Assessment to type according to C2, D(carried out by a Notified Body according, to the established frequency).</i>	


LGAI Technological Center, S.A.
Xavier Ruiz Peña
Managing Director, Product Conformity B.U.



Este documento carece de validez sin su anexo técnico, cuyo número coincide con el del certificado.
This document is not valid without its technical annex, whose number coincides with the number of certificate.
Puede comprobarse la validez de este certificado en nuestra página web / You can check the validity of this certificate into our website at:
www.appluslaboratories.com/certified_products

LGAI Technological Center, S.A. (APPLUS)
Campus UAB – Ronda de la Font del Carme, s/n
E - 08193 Bellaterra (Barcelona)
T +34 93 567 20 00
www.appluslaboratories.com



Technical Annex Ed. 1
24/08/2020

ANEXO TÉCNICO TECHNICAL ANNEX

0370-4243-PPE/B

I. MODELOS INCLUIDOS EN EL CERTIFICADO

REFERENCES INCLUDED IN THIS CERTIFICATE

MARCA <i>BRAND</i>	LVTU
IDENTIFICACIÓN DEL EPI (NÚMERO DE TIPO) <i>IDENTIFICATION OF THE PPE (TYPE NUMBER)</i>	Ref.: LT2020-AP3 Particle filtering half mask
NIVEL O NIVELES DE RENDIMIENTO O LA CLASE DE PROTECCIÓN DEL EPI <i>PERFORMANCE LEVEL OR PROTECTION CLASS OF THE PPE</i>	FFP3 NR
INFORME DE ENSAYO <i>TEST REPORT</i>	[2020]WSZ FHL NO.7307 issued by Jiangsu Guojian Testing Technology Co.,Ltd.



CERTIFICADO DE CONFORMIDAD CON EL TIPO CONFORMITY TO TYPE CERTIFICATE



No. **0370-4465-PPE/C2**

ORGANISMO NOTIFICADO Nº <i>NOTIFIED BODY NUMBER</i>	0370 - LGAI TECHNOLOGICAL CENTER (APPLUS)
SOLICITANTE <i>APPLICANT</i>	Ningbo Lvtu Safety Technology Co.,Ltd. No.6,Zhong xing Road,Yuyao Economic Development Zone,Zhejiang Province 315403,CHINA
FABRICANTE <i>MANUFACTURER</i>	Ningbo Lvtu Safety Technology Co.,Ltd. 3 / F, building 9, 300 Yinhai Road, Jiangbei District, Ningbo City,Zhejiang Province 315403,CHINA
REGLAMENTO DE APLICACIÓN PARA DAR LA CONFORMIDAD / APPLICABLE REGULATION TO GIVE CONFORMITY: REGLAMENTO (UE) 2016/425 SOBRE LOS EQUIPOS DE PROTECCIÓN INDIVIDUAL <i>REGULATION (EU) 2016/425 PERSONAL PROTECTIVE EQUIPMENT</i>	
PROCEDIMIENTO DE EVALUACIÓN DE LA CONFORMIDAD CON EL TIPO <i>CONFORMITY ASSESSMENT PROCEDURE TO TYPE</i>	Módulo // <i>Module:</i> C2 BASADA EN EL CONTROL INTERNO DE LA PRODUCCIÓN MÁS EL CONTROL SUPERVISADO DE LOS PRODUCTOS A INTERVALOS ALEATORIOS <i>BASED ON INTERNAL PRODUCTION CONTROL PLUS SUPERVISED CONTROL OF PRODUCTS AT ALEATORY INTERVALS</i>
IDENTIFICACIÓN DEL EPI (NÚMERO DE TIPO) <i>IDENTIFICATION OF THE PPE (TYPE NUMBER)</i>	Ref.: LT2020-AP3 Particle filtering half mask
NIVEL O NIVELES DE RENDIMIENTO O LA CLASE DE PROTECCIÓN DEL EPI / PERFORMANCE LEVEL OR PROTECTION CLASS OF THE PPE	FFP3 NR
FECHA DE EMISIÓN / ISSUE DATE	22/09/2020
VALIDEZ HASTA / VALIDITY UNTIL:	22/09/2021
El presente certificado se mantendrá vigente durante 1 año siempre que no se modifiquen las condiciones establecidas en el Certificado de Examen UE de Tipo referenciado en el Anexo. <i>This certificate will remain in force for 1 year as long as the conditions established in the EU Type certificate referenced in the annex are not modified.</i>	



Xavier Ruiz Peña
Managing Director, Product Conformity B.U.



Este documento carece de validez sin su anexo técnico, cuyo número coincide con el del certificado.
This document is not valid without its technical annex, whose number coincides with the number of certificate.

Puede comprobarse la validez de este certificado en nuestra página web / You can check the validity of this certificate into our website at:
www.appluslaboratories.com/certified_products

LGAI Technological Center, S.A. (APPLUS)
Campus UAB – Ronda de la Font del Carme, s/n
E - 08193 Bellaterra (Barcelona)
T +34 93 567 20 00
www.appluslaboratories.com



Technical Annex Ed. 1
22/09/2020

ANEXO TÉCNICO TECHNICAL ANNEX

0370-4465-PPE/C2

I. MODELOS INCLUIDOS EN EL CERTIFICADO

REFERENCES INCLUDED IN THIS CERTIFICATE

Nº CERTIFICADO DE EXAMEN UE DE TIPO <i>NR. EU TYPE EXAMINATION CERTIFICATE</i>	0370-4243-PPE/B
EMITIDO POR <i>ISSUED BY</i>	LGAI TECHNOLOGICAL CENTER S.A. (APPLUS) (Organismo notificado nº 0370 / Notified Body nr. 0370).
FECHA EMISIÓN <i>ISSUE DATE</i>	24/08/2020
VALIDEZ HASTA <i>VALIDITY UNTIL</i>	24/08/2025
MARCA <i>BRAND</i>	LVTU
IDENTIFICACIÓN DEL EPI (NÚMERO DE TIPO) <i>IDENTIFICATION OF THE PPE (TYPE NUMBER)</i>	Ref.: LT2020-AP3 Particle filtering half mask
NIVEL O NIVELES DE RENDIMIENTO O LA CLASE DE PROTECCIÓN DEL EPI / <i>PERFORMANCE LEVEL OR PROTECTION CLASS OF THE PPE</i>	FFP3 NR
INFORME DE ENSAYO DE CONFORMIDAD CON EL TIPO <i>CONFORMITY TO TYPE TEST REPORT</i>	[2020] WSZ FHL NO.7807 issued by Jiangsu Guojian Testing Technology Co., Ltd.

EU Declaration of Conformity

Annex IX PPE Regulation (EU) 2016/425

This EU Declaration of conformity refers to the following products

Product Name	Model	Classification/Type	Batch No./Serial No./identifier
Particle Filtering half mask	LT2020-AP3	FFP3 NR	LvTu210120


The Manufacturer's name and address is as follows:

Name:	Ningbo Lvtu Safety Technology Co.,Ltd.
Address:	No.6,Zhong xing Road,Yuyao Economic Development Zone,Zhejiang Province

This Declaration of Conformity is issued under the sole responsibility of the Manufacturer.

Detailed description of the PPE to allow traceability/identification of the PPE.

LT2020-AP3: White folder half mask without valve

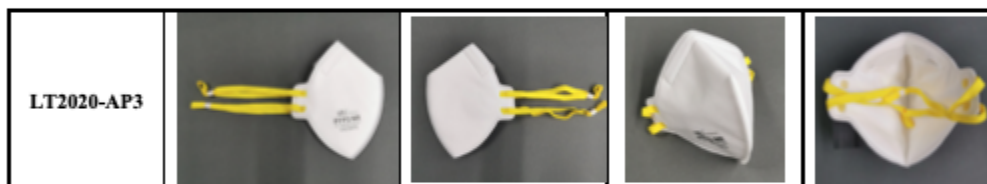

The article identified in (4) above is in conformance with the relevant Union Harmonization Legislation Regulation (EU) 2016/425.

References to the relevant harmonized standards used, including the date of the standard, or references to the other technical specifications, including the date of the specification, in relation to which conformity is declared:

No.	Harmonized standard name
1	EN 149 :2001+A1: 2009

NB 0370- LGAI TECHNOLOGICAL CENTER (APPLUS) performed the EU Type Examination (Module B) and issued the Type Examination Certificate Number: Module B

No.	Model	EU Type Examination (Module B) Certificate Number
1	LT2020-AP3	0370-4243-PPE/B
No.	Model	Testing Report Number
1	LT2020-AP3	[2020]WSZ FHL NO.7307 issued by Jiangsu Guojian Testing Technology Co.,Ltd.

Product Category:

1. This product is Category III and is subject to Module C2 Conformity to type based on quality assurance of the production process and is under the surveillance of NB 0370- LGAI TECHNOLOGICAL CENTER (APPLUS)

Signature: Joach tu Date: 2021.01.20
 Company stamp and/or legal signature:
 Position: International Business Manager



REPORTE DE PRUEBAS



Test Report

Report No.: [2020] WSZ FHL NO.7307

Product Name Particle filtering half mask

Applicant Ningbo Lvtu Safety Technology Co.,Ltd

Manufacturer Ningbo Lvtu Safety Technology Co.,Ltd


Test Type Entrusted inspection

Jiangsu Guojian Testing Technology Co., Ltd.
3/F., Unit D, Xingye Building, Taihu International Tech-Park, Wuxi, Jiangsu, China

Test Report

Product name	Particle filtering half mask	Model name	LT2020-AP3
		Brand	LVTU
Laboratory/ Add.	Jiangsu Guojian Testing Technology Co., Ltd./ 3/F., Unit D, Xingye Building, Taihu International Tech-Park, Wuxi, Jiangsu, China		
Applicant/ Add/Tel	Ningbo Lvtu Safety Technology Co.,Ltd/No.6, Zhongxing Road, Yuyao Economic Development Zone, Zhejiang Province 315403, CHINA/15867360534		
Manufacturer/ Add/Tel	Ningbo Lvtu Safety Technology Co.,Ltd./3/F,building 9,300 Yinhai Road,Jiangbei District,Ningbo City,Zhejiang Province 315403,CHINA/15867360534		
Sample classification	FFP3	Sample number	GW7307-2020
Sample quantity	110 pcs	Date of receipt of sample	23/07/2020
Test type	Entrusted inspection	Article/Batch/Style number	—
Date (s) of performance of tests	12/08/2020~18/08/2020	Testing location	Same as the Laboratory
Sample state	Meeting the requirements of testing	Sample description	Refer to page 3
Test standard(s)	EN 149:2001+A1:2009 Respiratory protective devices - Filtering half masks to protect against particles - Requirements, testing, marking		
Test items	Packaging, material, practical performance, finish of parts, compatibility with skin, flammability, carbon dioxide content of the inhalation air, head harness, field of vision, penetration of filter material, breathing resistance, total inward leakage		
Test conclusion	The samples upon testing comply with FFP3 classification requirements according to the standard EN 149:2001+A1:2009. The details of test results see on Pages 3-11. Date of issue: 20/08/2020		
Note	The test results presented in this report relate only to the submitted sample as received.		

Su Hequn 
Approver (name, signature)

Wan Heng 
Reviewer (name, signature)

Yang Ying 
Chief Tester (name, signature)

Sample description:	White
Test item particulars:	
Type of use	☐ re-useable particle filtering half mask ☒ single shift only particle filtering half mask
Classes of devices.....	☐ FFP1 ☐ FFP2 ☒ FFP3
Exhalation valve(s).....	☐ Yes ☒ No
Inhalation valve(s).....	☐ Yes ☒ No
Designed to protect against both solid & liquid aerosols.:	☒ Yes ☐ No
Possible test case verdicts:	
- Test case does not be required to the test object.....: NRq (Not required)	
- Test case does not apply to the test object.....: N/A (Not Applicable)	
- Test object does meet the requirement.....: P (Pass)	
- Test object does not meet the requirement.....: F (Fail)	
General remarks:	
The test results presented in this report relate only to the submitted sample as received. This report shall not be reproduced, except in full, without the written approval of the issuing Laboratory can provide assurance that parts of a report are not taken out of context. Determination of the test results includes consideration of measurement uncertainty from the test equipment and methods. Throughout this report a ☐ comma / ☒ point is used as the decimal separator.	
Environmental condition of the testing in this report:	
1) Unless otherwise specified, the ambient temperature for testing shall be 25 °C; 2) T.C. Temperature conditioned: a) for 24 h to a dry atmosphere of 70 °C; b) for 24 h to a temperature of -30 °C; and return to room temperature 25 °C for 4 h between exposures and prior to subsequent testing.	

S.No. (Cl.No.)	Test item		Unit	Technical requirements	Test result	Single item decision
1 (7.3)	Visual inspection	Marking/ information	—	Marking and the information supplied by the manufacturer, requirements refer to Cl.9 and Cl.10	The clause were not required	NRq
2 (7.4)	Packaging	Visual inspection	—	Particle filtering half masks shall be offered for sale packaged in such a way that they are protected against mechanical damage and contamination before use.	Particle filtering half masks packaged and protected against mechanical damage and contamination.	Pass
3 (7.5)	Material	Visual inspection	—	Materials used shall be suitable to withstand handling and wear over the period for which the particle filtering half mask is designed to be used.	Materials were suitable withstand handling and wear.	Pass
			—	After undergoing S.W., none of the particle filtering half masks shall have suffered mechanical failure of the facepiece or straps.	Sample 1: neither facepiece nor straps have mechanical failure	
					Sample 2: neither facepiece nor straps have mechanical failure	
					Sample 3: neither facepiece nor straps have mechanical failure	
			—	After undergoing S.W. and T.C., none of the particle filtering half masks shall not collapse.	Sample 4: no collapse	
					Sample 5: no collapse	
—	Any material from the filter media released by the air flow through the filter shall not constitute a hazard or nuisance for the wearer.	Not constitute a hazard or nuisance for the wearer				
4 (7.6)	Cleaning and disinfecting	—	Particle filtering half mask designed to be re-usable, the materials used shall withstand the cleaning and disinfecting agents and procedures to be specified by the manufacturer. Testing shall be done in accordance with 8.4 and 8.5.	☐ Fulfil the requirements after testing, or ☒ The Particle filtering half mask is NOT re-usable according to information supplied by manufacturer	N/A	
		—	With reference to 7.9.2, after cleaning and disinfecting the re-usable particle filtering half mask shall satisfy the penetration requirement of the relevant class. Testing shall be done in accordance with 8.11.	☐ Tests results refer to S. No. 7(7.9.2), or ☒ The Particle filtering half mask is NOT re-usable according to information supplied by manufacturer		

S.No. (Cl.No.)	Test item		Unit	Technical requirements	Test result				Single item decision
5 (7.7)	Practical performance	Head harness comfort	—	Head harness should be comfort.	Sample 1: has the feeling of comfortable wearing				Pass
					Sample 2: has the feeling of comfortable wearing				
		Security of fastenings	—	Fastenings are safe and reliable	Sample 1: All fastenings are firm				
					Sample 2: All fastenings are firm				
		Field of vision	—	Field of vision is acceptable	Sample 1: Having a wider visual field				
					Sample 2: Having a wider visual field				
6 (7.8)	Finish of parts	Visual inspection	—	Parts of the device likely to come into contact with the wearer shall have no sharp edges or burrs.	Parts of the device have no sharp edges and burrs				Pass
7 (7.9.2)	Leakage— Penetration of filter material	Sodium chloride	—	$\leq 1\%$	A.R. ¹⁾	0.1%	0.1%	0.1%	Pass
					S.W. ¹⁾	0.1%	0.1%	0.1%	
					M.S+ T.C. ²⁾	0.2%	0.2%	0.2%	
		Paraffin oil	—	$\leq 1\%$	A.R. ¹⁾	0.1%	0.1%	0.1%	Pass
					S.W. ¹⁾	0.1%	0.1%	0.1%	
					M.S+ T.C. ²⁾	0.3%	0.3%	0.4%	
		¹⁾ average penetration over a time of 30s, beginning 3 min after the start of the test reported ²⁾ max. penetration during exposure test reported; Note: The penetration of the filter of the particle filtering half mask shall meet the requirements below: Maximum penetration of sodium chloride aerosol test 95 L/min max. FFP1: 20%, FFP2: 6%, FFP3: 1% Maximum penetration of paraffin oil aerosol test 95 L/min max. FFP1: 20%, FFP2: 6%, FFP3: 1%							

Report No.: [2020] WSZ FHL NO.7307

S.No. (CLNo.)	Test item	Unit	Technical requirements	Test result		Single item decision
8 (7.10)	Compatibility with skin	—	Materials that may come into contact with the wearer's skin shall not be known to be likely to cause irritation or any other adverse effect to health.	A.R.	5 pcs all don't cause irritation	Pass
				T.C.	5 pcs all don't cause irritation	
9 (7.11)	Flammability	—	When tested, the particle filtering half mask shall not burn or not to continue to burn for more than 5s after removal from the flame.	A.R.	The Sample is burning. Burning time:0.4s	Pass
					The Sample is burning. Burning time:0.4s	
				T.C.	The Sample is burning. Burning time:0.5s	
					The Sample is burning. Burning time:0.4s	
10 (7.12)	Carbon dioxide content of the inhalation air	—	The carbon dioxide content of the inhalation air (dead space) shall not exceed an average of 1.0 % (by volume). Remark: 3 half masks (S1, S2 and S3) A.R. tested.	Sample 1	0.7225%	Pass
				Sample 2	0.7236%	
				Sample 3	0.7210%	
				average	0.72%	
11 (7.13)	Head harness	—	The head harness shall be designed so that the particle filtering half mask can be donned and removed easily. The head harness shall be adjustable or self-adjusting and shall be sufficiently robust to hold the particle filtering half mask firmly in position and be capable of maintaining total inward leakage requirements for the device.	A.R.	All of 5 pieces particle filtering half mask meet the requirements	Pass
				T.C.	All of 5 pieces particle filtering half mask meet the requirements	
12 (7.14)	Field of vision	—	The field of vision is acceptable if determined so in practical performance tests.	The two samples both have a wider visual field		Pass

S.No. (CLNo.)	Test item		Unit	Technical requirements	Test result	Single item decision
13 (7.15)	Exhalation valve(s)	Visual inspection	—	A particle filtering half mask may have one or more exhalation valve(s), which shall function correctly in all orientations.	No exhalation valve(s)	N/A
			—	If an exhalation valve is provided it shall be protected against or be resistant to dirt and mechanical damage, and may be shrouded or may include any other device that may be necessary for the particle filtering half mask to comply with 7.9.	No exhalation valve(s)	
		Flow conditioning	—	Exhalation valve(s), if fitted, shall continue to operate correctly after a continuous exhalation flow of 300 l/min over a period of 30 s.	No exhalation valve(s)	
		Strength of attachment of exhalation valve housing	—	When the exhalation valve housing is attached to the faceblank, it shall withstand axially a tensile force of 10 N applied for 10 s.	No exhalation valve(s)	
14 (7.17)	Clogging— Breathing resistance & Penetration of filter material		—	Optional for single shift use devices, mandatory for re-usable devices. Tested by Cl. 7.17.1/2/3.	☐ Tests results refer to Table C&D, or ☒ Tests not requested for single shift use face mask	N/A
15 (7.18)	Demountable parts		—	All demountable parts (if fitted) shall be readily connected and secured, where possible by hand.	No demountable parts	N/A

Table A- Leakage—Total Inward Leakage

S.No. (CLNo.)	Test item	Unit	Technical requirements ¹⁾	Test result							Single item decision
16 (7.9.1)	Leakage— Total inward leakage	—	At least 46 out of the 50 individual exercise results shall be not greater than 5% ; And in addition, at least 8 out of the 10 individual wearer arithmetic means for the total inward leakage shall be not greater than 2% .	Exercises	E1 (%)	E2 (%)	E3 (%)	E4 (%)	E5 (%)	TIL (%)	Pass
				A.R.	0.6	1.3	1.2	1.1	0.9	1.0	
					0.9	1.3	1.2	1.6	1.0	1.2	
					1.2	1.8	1.6	1.7	1.3	1.5	
					0.4	0.8	1.0	0.9	0.4	0.7	
					0.9	1.9	1.6	1.8	1.5	1.5	
				T.C.	0.5	1.5	1.3	1.2	1.1	1.1	
					1.2	2.0	1.8	1.7	1.3	1.6	
					0.7	1.5	1.7	1.6	1.2	1.3	
					0.7	1.9	2.0	1.8	1.2	1.5	
0.8	1.7	1.8	1.9		0.9	1.4					

Note 1:

at least 46 out of the 50 individual exercise results (i.e. 10 subjects x 5 exercises) for total inward leakage shall be not greater than 25 % for FFP1 11 % for FFP2 5 % for FFP3

in addition, at least 8 out of the 10 individual wearer arithmetic means for the total inward leakage shall be not greater than 22 % for FFP1 8 % for FFP2 2 % for FFP3.

Table A-1- Test subjects—Facial dimension

Test Subject No.	Length of face (mm)	Width of face (mm)	Depth of face (mm)	Width of mouth (mm)
1	120	130	109	59
2	122	140	115	65
3	119	160	139	55
4	112	122	119	63
5	110	130	118	60
6	115	119	110	59
7	112	123	113	55
8	103	130	100	50
9	118	139	130	63
10	120	135	125	50

Table B- Breathing Resistance

Table D Breathing Resistance												
S.No. (CLNo.)	Test item		Unit	Technical requirements ¹⁾	Test result						Single item decision	
					Exercises	Facing directly ahead	Facing vertically upwards	Facing vertically downwards	Lying on the left side	Lying on the right side		
17 (7.16)	Breathing resistance	Inhalation 30 L/min	mbar	≤ 1.0	A.R.	0.5	0.5	0.4	0.5	0.5	Pass	
						0.5	0.4	0.5	0.5	0.4		
						0.4	0.5	0.5	0.4	0.5		
					S.W.	0.5	0.4	0.5	0.5	0.4		
						0.4	0.5	0.5	0.4	0.5		
						0.5	0.5	0.4	0.5	0.5		
					T.C.	0.5	0.4	0.5	0.5	0.4		
						0.4	0.5	0.5	0.4	0.5		
						0.5	0.5	0.4	0.5	0.5		
		Inhalation 95 L/min		A.R.	1.5	1.5	1.4	1.5	1.5	Pass		
					1.5	1.4	1.5	1.5	1.4			
					1.4	1.5	1.5	1.4	1.5			
				S.W.	1.5	1.4	1.5	1.5	1.4			
					1.4	1.5	1.5	1.4	1.5			
					1.5	1.5	1.4	1.5	1.5			
				T.C.	1.4	1.5	1.5	1.4	1.5			
					1.5	1.5	1.4	1.5	1.5			
					1.5	1.4	1.5	1.5	1.4			
	Exhalation 160 L/min	A.R.		2.1	2.1	2.0	2.1	2.1	Pass			
				2.1	2.0	2.1	2.1	2.0				
				2.0	2.1	2.1	2.0	2.1				
		S.W.		2.1	2.0	2.1	2.1	2.0				
				2.0	2.1	2.1	2.1	2.1				
				2.1	2.1	2.0	2.0	2.1				
		T.C.		2.0	2.1	2.1	2.0	2.1				
				2.1	2.1	2.0	2.1	2.1				
				2.1	2.0	2.1	2.1	2.0				

Note 1: Limitation may need be changed according to classification, refer to Table 2 — Breathing resistance of EN 149:2001 +A1:2009 for the Technical requirements.

Table C- Clogging Test—Breathing resistance

S.No. (CLNo.)	Test item ^{1) 2)}		Unit	Technical requirements ^{1) 2)} (mbar)	Test result						Single item decision
					Exercises	Facing directly ahead	Facing vertically upwards	Facing vertically downwards	Lying on the left side	Lying on the right side	
18 (7.17)	Clogging test— Breathing resistance	Inhalation 95 L/min	mbar	—	A.R.						N/A
					T.C.						
		Exhalation 95 L/min	mbar	—	A.R.						N/A
					T.C.						

Note 1: Valved particle filtering half masks

After clogging the inhalation resistances shall not exceed FFP1: 4 mbar FFP2: 5 mbar FFP3: 7 mbar at 95 L/min continuous flow;
The exhalation resistance shall not exceed 3 mbar at 160 L/min continuous flow.

Note 2: Valveless particle filtering half masks

After clogging the inhalation and exhalation resistances shall not exceed FFP1: 3 mbar, FFP2: 4 mbar FFP3: 5 mbar at 95 L/min continuous flow.

Table D- Clogging Test—Penetration of filter material

S.No. (CLNo.)	Test item		Unit	Technical requirements	Test result		Single item decision
19 (7.17)	Clogging test- Penetration of filter material	Paraffin oil	—	—	A.R.		N/A
					T.C.		
					T.C.		

Note: Maximum penetration of test aerosol test 95 L/min max. FFP1: 20%, FFP2: 6%, FFP3: 1%


Abbreviations :

A.R. As received	M.S. Mechanical strength	S.W. Simulated wearing treatment
T.C. Temperature conditioned	F.C. Flow conditioned	C.D. Cleaning and Disinfecting

Annex A- Estimates of the uncertainty of measurement

Test item	Uncertainty
Total inward leakage	2.98%
Penetration of filter material	1.00%
Flammability	1.00%
Carbon dioxide content of the inhalation air	0.93%
Breathing resistance	1.90%

Annex B- Sample Photo

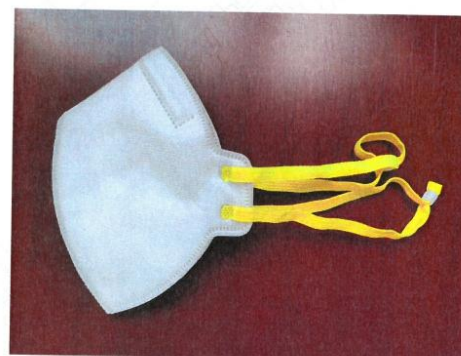

————— The end —————